



Batter (rise/run) = B
 (Example - "5:1" = 5)

Slope (rise/run) = M
 (Example - "2:1" = .5)

$$E = \frac{MH + MBW_r - MBW_m}{(B-M)}$$



Phone: (916) 773 - 9766
 Fax: (916) 773 - 9764
 1588 Bedell Ct.,
 Roseville, CA 95747

Adjustment for Batter

DATE: 2/23/2007

SCALE: None

JOB #: